 




angelbaby

echoczar modulation device

instruction diagram

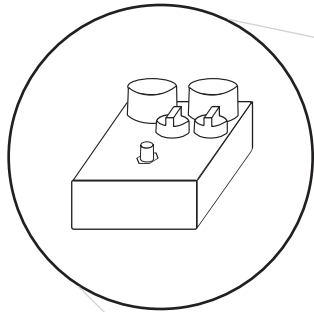

MODE SWITCH

choose between 3 chorus voices:
SOLO (single voice) traditional sound, use with short delay times
DUET (two voice) provides more pitch variation, use with fast rates
TRIO (three voice) provides an ensemble sound; use with medium rates

DELAY 2 (Red LED Off)

sets the Delay Time of the echoczar's Delay 2 (Yellow) channel
 note: when the angelbaby is connected, the echoczar's Delay 2 (Yellow) channel Delay Time knob is completely bypassed

DEPTH

controls the amount of modulation (wow and flutter) that is present in the repeats the echoczar's dry signal is not affected, only the repeats

MODULATION OUTPUT JACK

connect only to echoczar's Delay 2 (Yellow) channel Delay Time Expression Jack use 1/4" TRS (stereo) cable

FOOT SWITCH

selects between Delay 2 (Yellow) channel and the angelbaby modulation mode Delay 3 (Red) channel

note: the angelbaby does not have a power jack or use batteries the angelbaby is powered by the echoczar through the connecting 1/4" TRS (stereo) cable

ACTUAL SIZE

4 1/4" deep
 3 1/4" wide
 2" tall

