


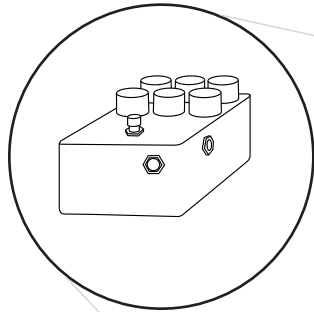

# dove

## low/medium gain distortion

## instruction diagram



**TREBLE**  
active treble control  
clockwise is boost, counter-clockwise is cut  
12:00 is flat

**GAIN MODE TOGGLE**  
(3 position)  
X - extra gain and heaviness  
C - cleans up well, least hiss  
T - upper treble boost

**SIZZLE**  
a gain control for the  
upper frequency harmonics  
full clockwise is searing  
full counter-clockwise is smooth

**GAIN**  
adjusts the distortion level  
note: when using the exp pedal, the Gain  
knob sets the max available distortion

**MIDDLE**  
active middle control  
clockwise is boost, counter-clockwise is cut  
12:00 is flat

**BASS**  
active bass control  
clockwise is boost, counter-clockwise is cut  
12:00 is flat


**DEEP TOGGLE**  
(two position)  
Up - adds fullness for low gain settings  
Down - tight bass for higher gain settings

On (Green LED)

**VOLUME**  
adjust to taste  
unity gain is  
approx 11:00

OUTPUT

18 VDC IN

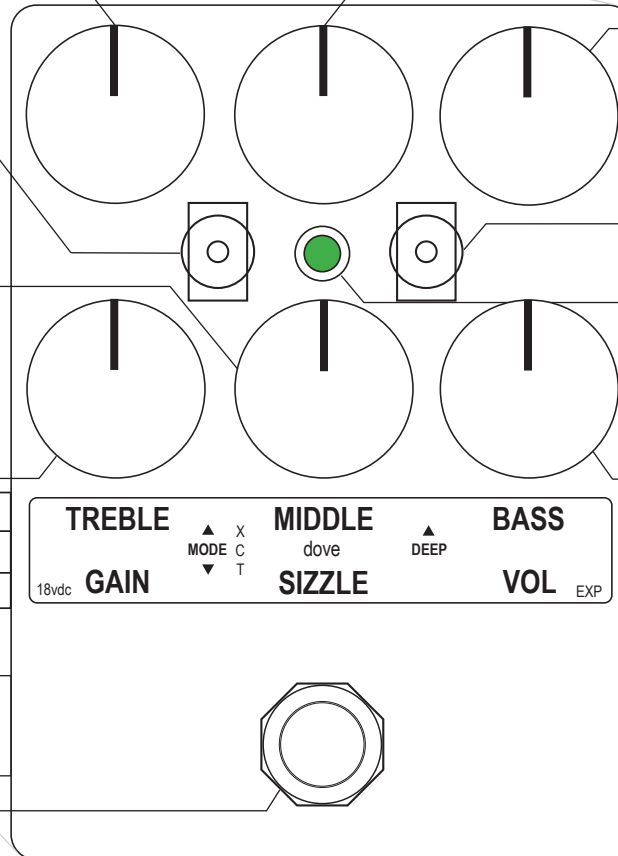

INPUT

**EXPRESSION JACK**  
allows the expression pedal to  
vary the Gain (distortion level)  
does not bypass the dove's Gain knob  
allows clean-up with preservation of highs  
unlike turning down the guitar volume knob

### ACTUAL SIZE

4 1/4" deep  
3 1/4" wide  
2" tall