




powerglide

two-speed analog tremolo

instruction diagram

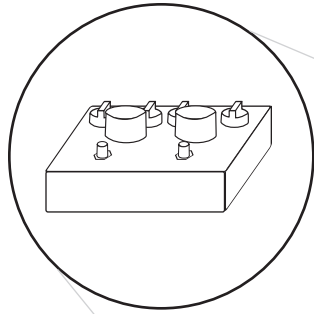

DEPTH 1 & DEPTH 2

individual Depth knobs for Speed 1 and Speed 2
for example: Speed 1 may be set slow, at max Depth (5:00)
for a deep sway and Speed 2 may be set fast
at medium Depth (12:00) for a softer warble

Yellow LED
flashes in time when Speed 1 is selected

VOLUME
adjust to taste
unity gain is approx 11:00

On (Red LED)

WAVEFORM MODE SELECT (switch)
(global) 3 position
Up - Brown mode - deep and swaying
Middle - Black mode - smooth and even
Down - Square mode - full on-off-on-off chop

ACTUAL SIZE
4" deep
5 3/4" wide
2" tall

selects On or Bypass
hardwired, true-bypass switching

EXPRESSION PEDAL INPUT
speed control for Speed 1 (Yellow)
Ramp knob becomes damping control
to smooth out Expression pedal movement

Green LED
flashes in time when Speed 2 is selected

RAMP
instant glitchless speed change between
Speed 1 and Speed 2 on Min Ramp
Max Ramp provides 3 to 5 seconds to ramp
up to the fast Speed setting, 10 seconds to
ramp down to the slow Speed setting

